



Quick Start Guide



ZTE Zmax™ 2



Getting to Know Your Phone

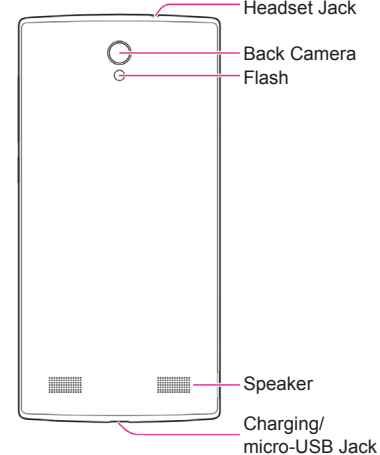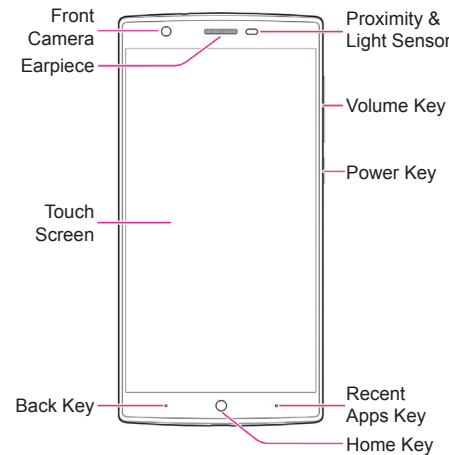

Power Key

- Press and hold to turn on or off airplane mode, power off or restart the phone.
- Press to turn off or on the screen display.

Home Key

- Touch to return to the home screen.
- Touch and hold to open Google Search.

Back Key

Touch to go to the previous screen.

Recent Apps Key

Touch to see recently used applications.


Volume Key

Press or hold either end of the key to turn the volume up or down.


Starting Up

Switch off your phone before installing or replacing the battery or the USIM card. The microSDHC™ card is optional and can be installed and removed while the phone is turned on. Unmount the microSDHC card before removing it.

1. Place your finger in the slot at the bottom of the back cover to lift and remove the cover.

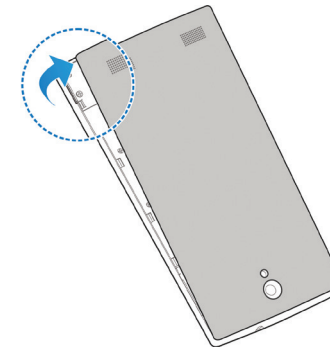


2. Hold the micro-USIM card with its cut corner oriented as shown and slip it into the card holder.

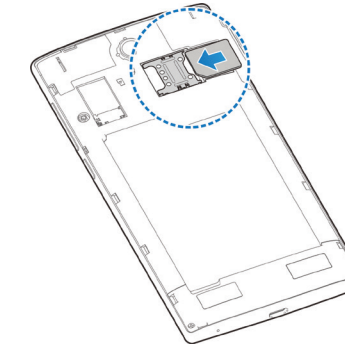

WARNING!

To avoid damage to the phone, do not use any other kind of SIM card, or any non-standard micro-SIM card cut from a SIM card. You can get a standard micro-SIM card from your service provider

3. Hold your microSDHC card with the metal contacts facing down and slide it into the microSDHC card slot.

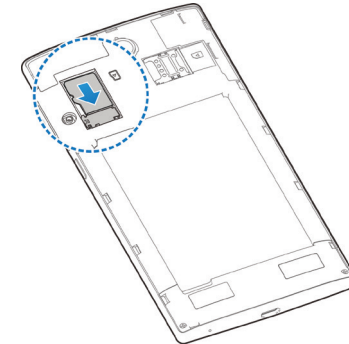

NOTE:

Some applications may require a microSDHC card to work normally or may store certain data on it. Therefore, it is recommended that you keep a microSDHC card installed and not remove or replace it randomly.

LEGAL INFORMATION

Copyright © 2015 ZTE CORPORATION

All rights reserved.

No part of this publication may be quoted, reproduced, translated or used in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

Notice

ZTE Corporation reserves the right to make modifications on print errors or update specifications in this guide without prior notice.

We offer self-service for our smart terminal device users. Please visit the ZTE official website (at www.zteusa.com) for more information on self-service and supported product models. Information on the website takes precedence.

Visit <http://www.ztedevice.com> to download the user manual. Just click **Support > Manuals** from the home page and then select your location, product type, and name to search for related support information.

Disclaimer

ZTE Corporation expressly disclaims any liability for faults and damages caused by unauthorized modifications of the software.

Images and screenshots used in this guide may differ from the actual product. Content in this guide may differ from the actual product or software.

Trademarks

ZTE and the ZTE logos are trademarks of ZTE Corporation.

Google and Android are trademarks of Google, Inc.

The *Bluetooth*® trademark and logos are owned by the Bluetooth SIG, Inc. and any use of such trademarks by ZTE Corporation is under license.

 microSDHC Logo is a trademark of SD-3C, LLC.



Qualcomm® Snapdragon™ processors are products of Qualcomm Technologies, Inc.

Qualcomm and Snapdragon are trademarks of Qualcomm Incorporated, registered in the United States and other countries. Used with permission.

LTE is a trademark of ETSI.


Other trademarks and trade names are the property of their respective owners.

Version No.: R1.0

Edition Time : July 10, 2015

Manual No. : 079584507453

- Align the connectors on the phone and the battery and slide the battery into the compartment. Then gently press the battery down until it is secured.

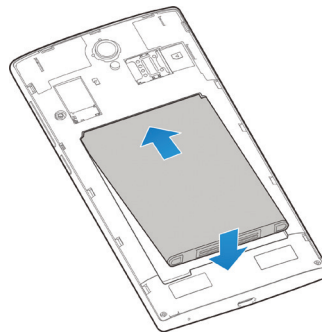

- Align the back cover with the back of the phone and press the cover back into place. Ensure that all the tabs are secure and there are no gaps around the cover.

Powering On/Off Your Phone

- Press and hold the **Power Key** to turn on your phone.
- To turn it off, press and hold the **Power Key** to open the options menu and touch **Power off**.

Restarting Your Phone

If the screen freezes or takes too long to respond, try pressing and holding the **Power Key** for about 10 seconds to restart the phone.

Calling and Voicemail


Making a Call

- Touch the **Home Key** > .
- Touch  and enter the phone number or the contact name with the dialpad. The phone will display matching information from your contact list.
- Touch the matching contact to call the contact or touch  to call the number.




NOTE:

You can also touch the search box at the top of the Phone app screen and enter the phone number or contact name you want to call. Touch the matching contact or **Call** [number] to place the call.

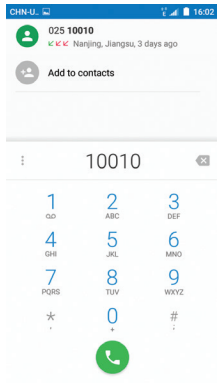



Checking Voicemail

- Touch the **Home Key** >  > .
- Touch and hold the **1 Key** on the dialpad. If prompted, enter your voicemail password.
- Follow the voice prompts to listen to and manage your voicemail messages.

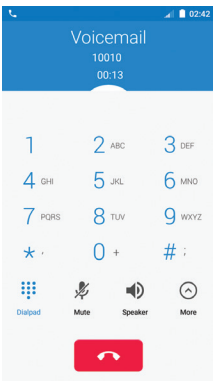

Creating a New Contact

- Touch the **Home Key** >  >  and touch the all contacts tab **CONTACTS**.
- Touch  to add a new contact.
- If you have multiple account types associated with your phone, touch the field above the name and select a contact type.
- Enter the contact name, phone numbers, email addresses, and other information.
- Touch  to save the contact.

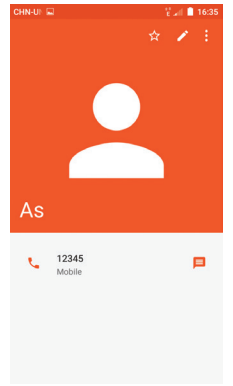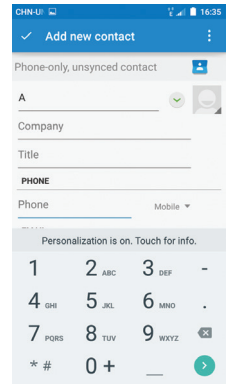

Sending a Message

- Touch the **Home Key** >  > .
- Touch  at the bottom.
- Add recipients by one of the following ways.
 - Touch the **To** field and manually enter the recipient's number or the contact name. If the phone presents a few suggestions, touch the one you want to add.
 - Select recipients from your contacts by touching .
- Touch the **Type message** field and enter the content of your text message.
- If you want to send a multimedia message, touch the paper clip icon  to attach a file or a slideshow to the message.
- Touch  to send.